

## Base Unit - Replacing the DFU filter and the Zero air cartridge

### 1 Replacing the DFU filter

- 1- Release the push-fit connector at both ends of the DFU filter




Location of the DFU Filter

- 2- Install the new DFU filter in the same direction as the previous one and reconnect the push-fit connectors at both ends

## 2 Replacing the Zero air cartridge

- 1- Release the push-fit connector linking the zero air cartridge to the DFU filter

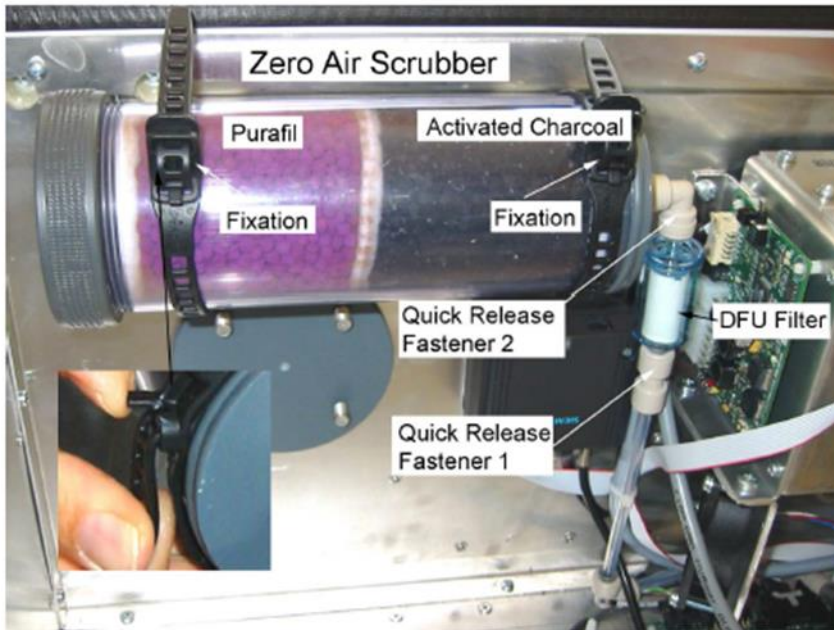

View of the Zero Air Scrubber

- 2- Release both fixation (the black plastic straps) and pull out the zero air canister
- 3- Unscrew the top of the scrubber canister and discard the Purafil® and charcoal contents. Refill the scrubber with fresh charcoal and purafil. Take care to refill the scrubber in the correct order. First fill with charcoal at the bottom, then place the white filter pad and the Purafil® chemical on top. Put a new filter pad on top of that, then close the cartridge with the screw-top cap.
- 4- Tighten the cap on the scrubber—hand-tight only and replace the canister inside the airpointer