

## Base Unit HC - Cleaning the air conditioner of the airpointer

- 1- Tools you need
  - Screwdriver Torx size T25
  - a soft brush
  
- 2- Locate the grilles of the AC inlet on the right hand side of the airpointer



3- Remove the 4 screws holding the grilles



- 4- Remove the dust and dirt from the filter



- 5- Screw back the grilles