


Base Unit - Replacing the miniUPS battery

- 1- Tools you need
 - A medium Phillips screwdriver

- 2- Turn off the airpointer, pull out the power plug. Wait 1 minute for the PC to shut down completely, then remove all connectors to the PC. Remove the 4 screws holding the PC to the ceiling of the airpointer and remove the PC from the airpointer



- 3- Remove the 2 screws on the lower cover of the PC to access the battery connector

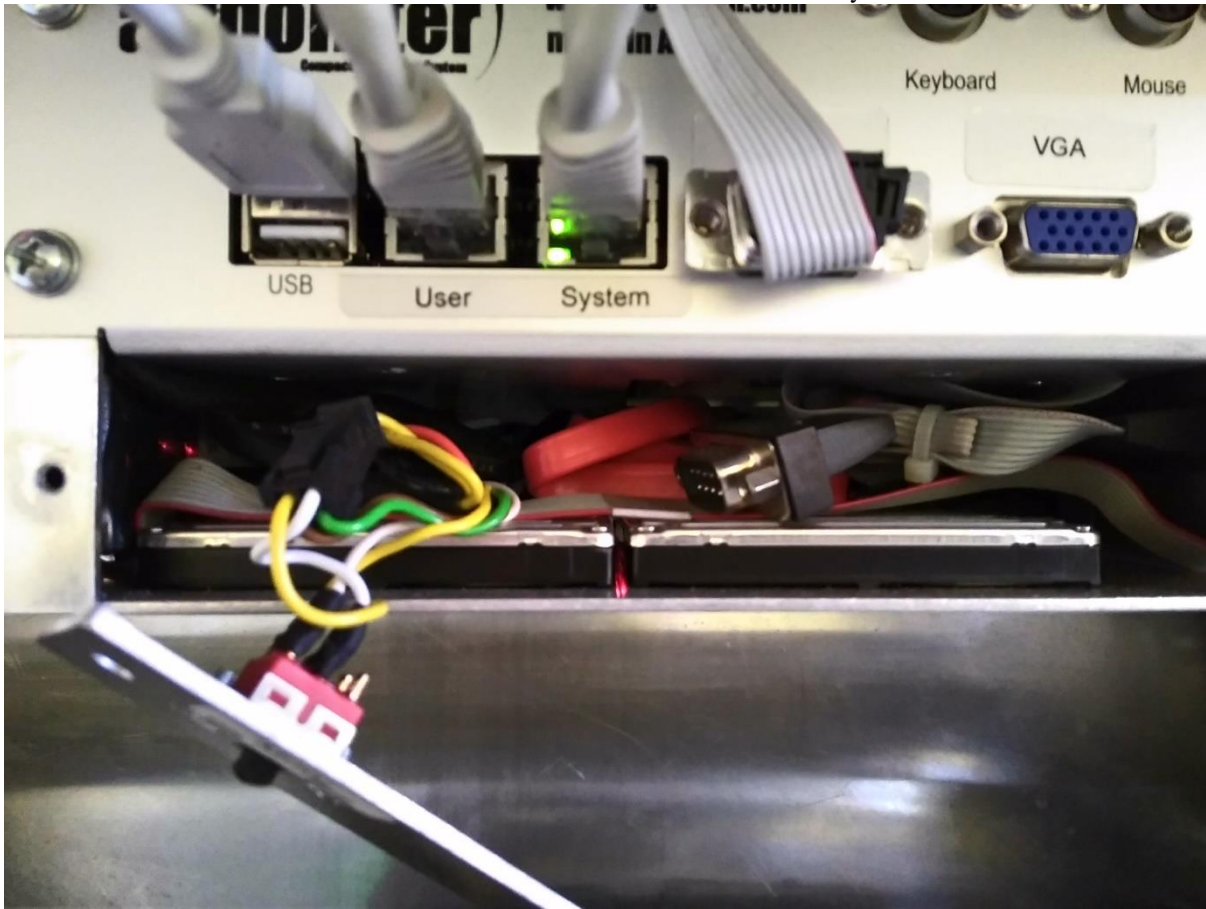

- 4- Remove the old battery pack and install the new one instead



- 5- Screw back the lower cover of the PC, then reinstall the PC in the airpointer