


CO module (T) –Checking the capillary and replacing the DFU filter

- 1- Turn off and unplug the airpointer. Pull the CO module drawer
- 2- Locate the capillary and the DFU filter

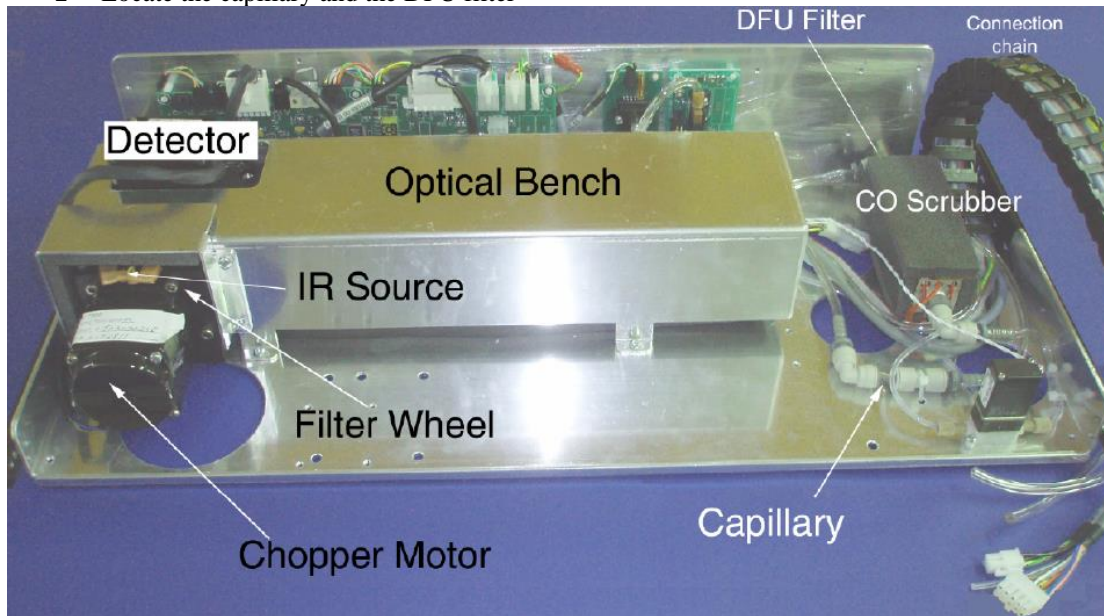

- 3- Unlock the push-fit connectors holding the DFU filter, remove the DFU filter, and install a new DFU filter in the same position. Then, remove the push-fit connectors holding the capillary, inspect it and if necessary, install a new capillary. In the absence of flow / pressure / leak problems, and if the capillary looks clean and intact, put the capillary back in place.

