


MultiPM – Cleaning the sensor chamber

1- Tools you need

- 2 adjustable wrenches
- A small Phillips screwdriver
- A soft lint-free cloth

2- Turn off and unplug the airpointer. Locate the MultiPM module (usually, in the upper left corner)

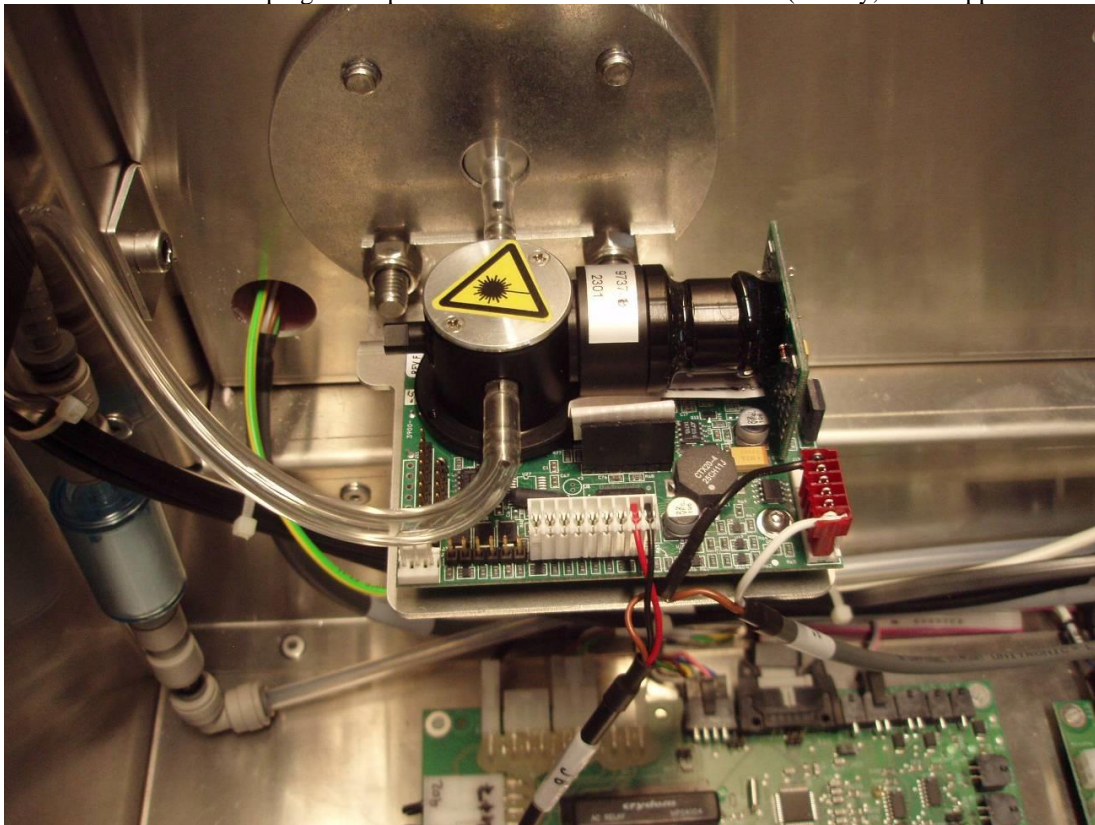


3- Slightly loose the 2 nuts holding the multiPM to the roof of the airpointer, in order to be able to move the multiPM module, but don't move it out yet

4- Disconnect the white and the red connectors and the 2 tubes (inlet and outlet)

5- Remove the multiPM out of the airpointer


6- Open the multiPM chamber by removing the 2 top screws

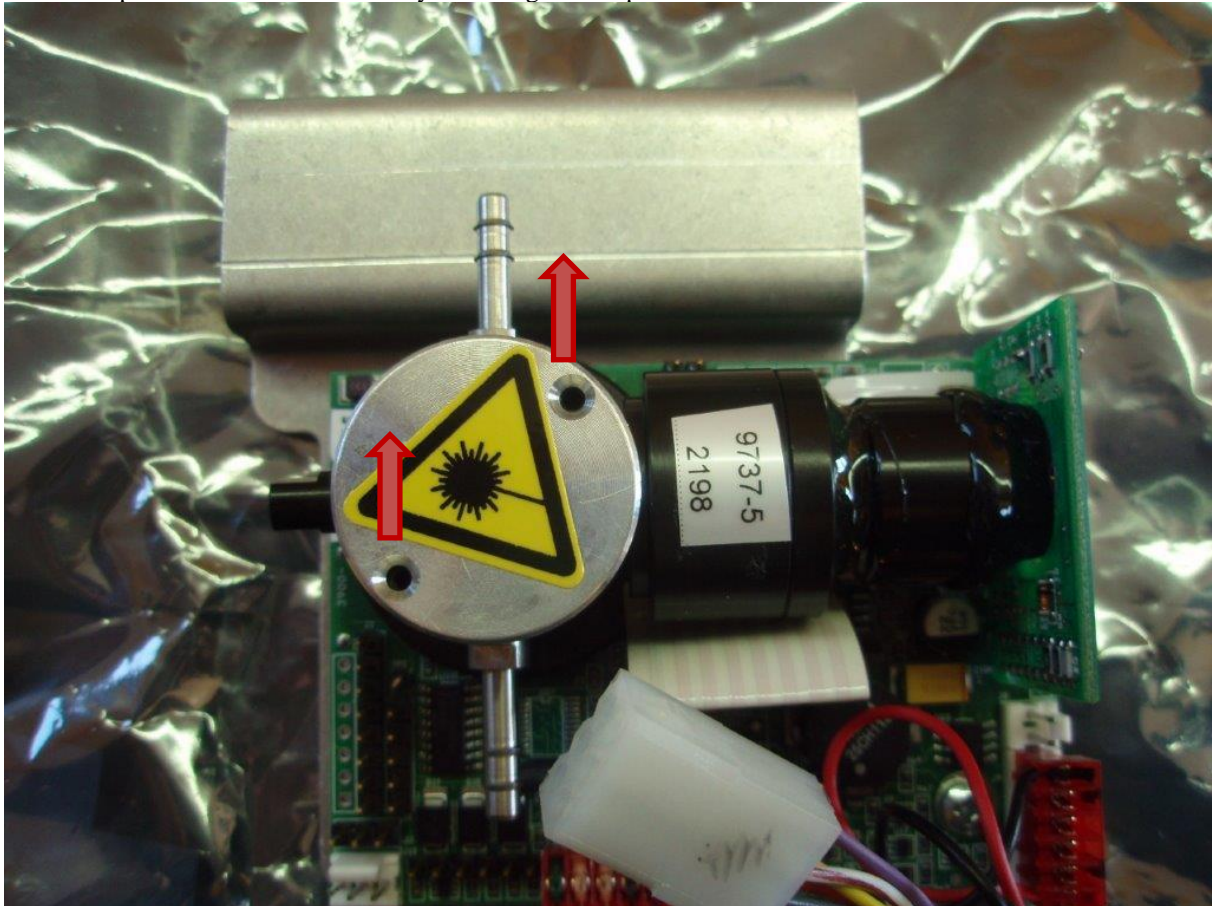

7- Clean the lid of the multiPM chamber with a lint-free cloth



- 8- Clean the multiPM chamber with a lint-free cloth

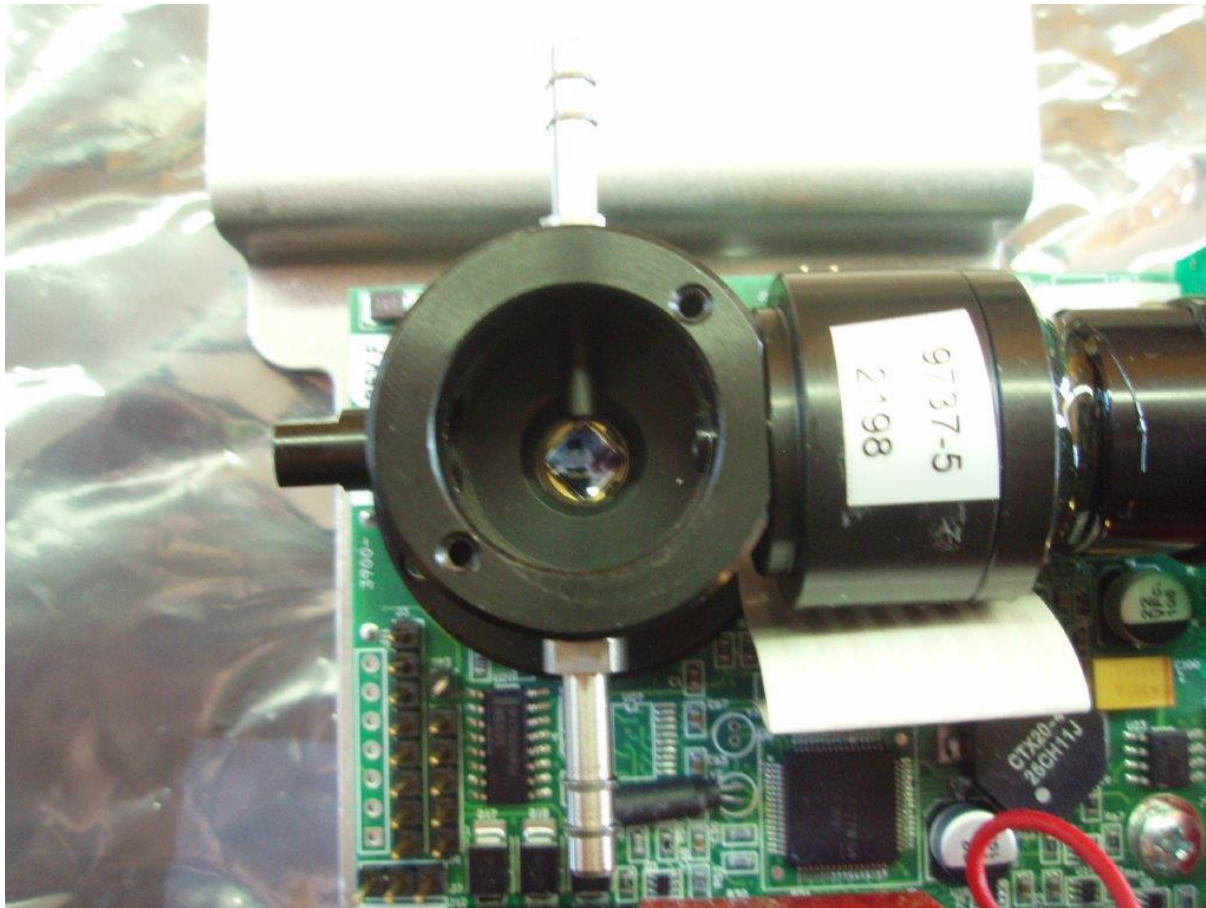

- 9- Screw back the lid to the chamber and reconnect the multiPM to the airpointer by following steps 1 to 4 in the reverse order