



BTEX module - Replacing the PID lamp

- 1- Tools you need
 - a small Phillips screwdriver
 - a PID opener tool
- 2- Remove the GC from the airpointer as explained in the procedure BTEX1
- 3- Unscrew the 4 screws at the back of each side of the GC and the screw at the back on top of the GC in order to detach the back cover

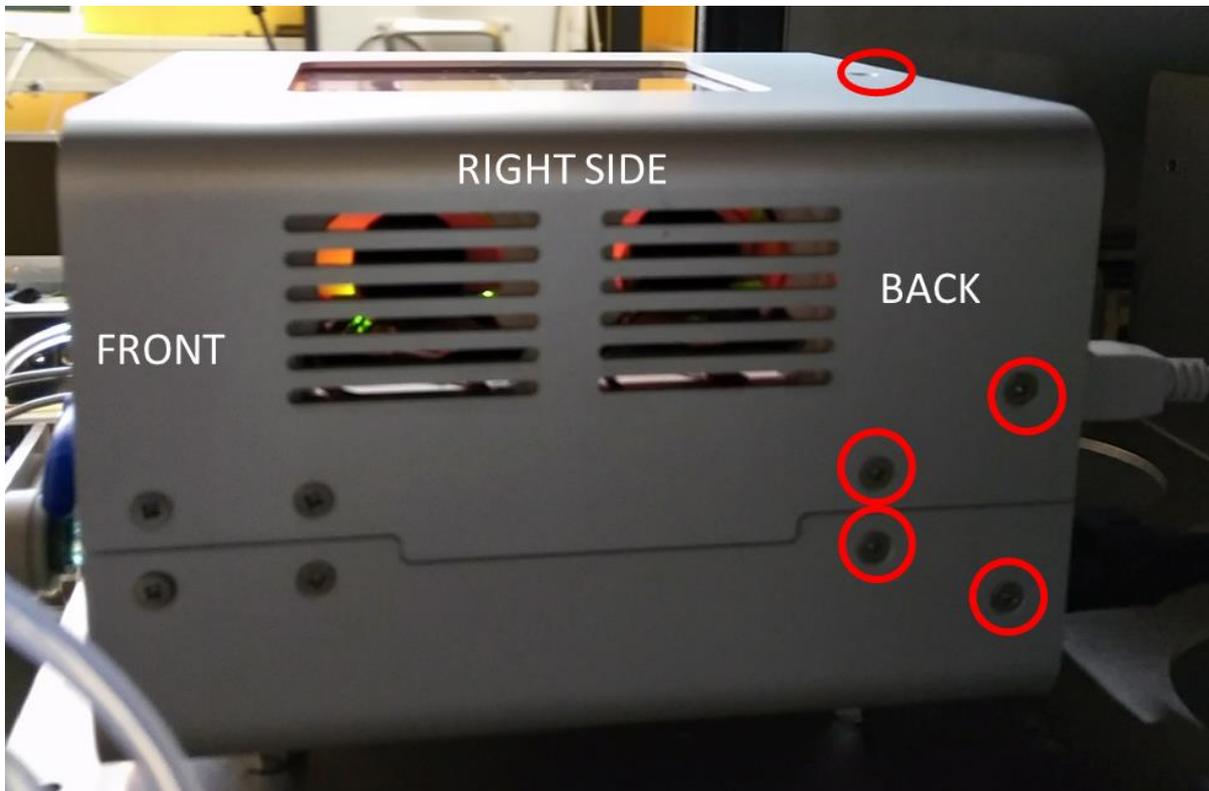


- 4- Locate the electronic board holding the PID lamp, and remove the 2 screws holding it

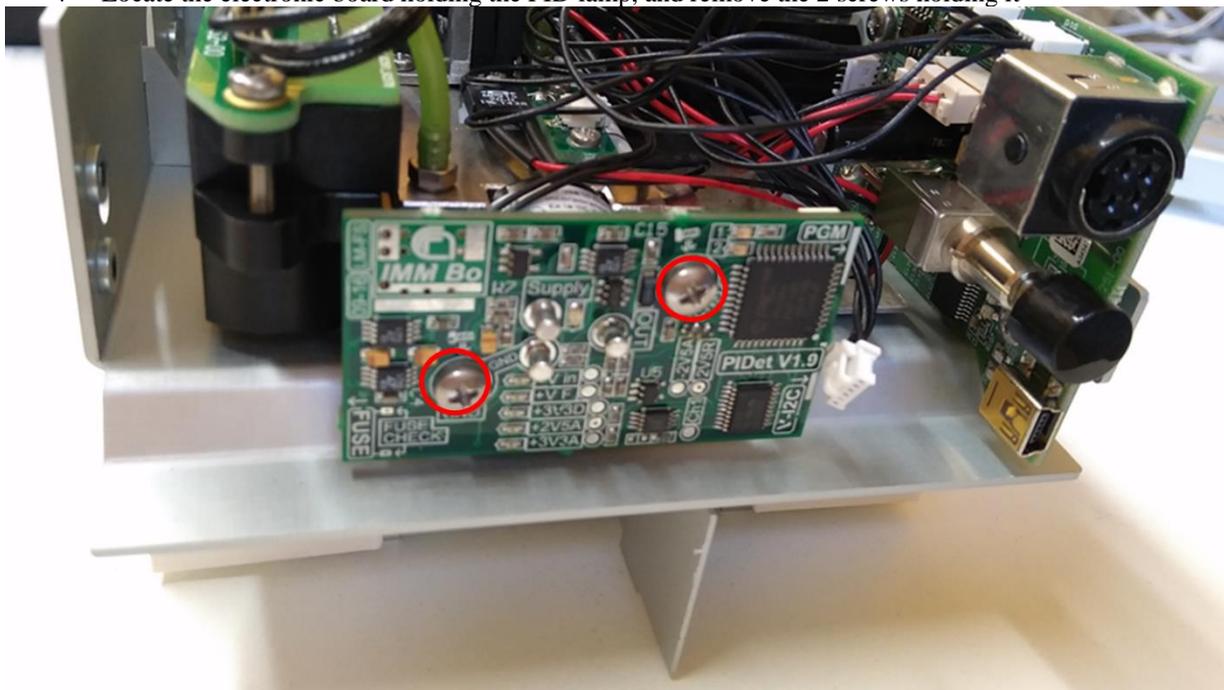


- 5- Using the PID opener tool, open the lid of the PID to take out the lamp from it



6- Using the PID opener tool, open the lid of the PID slowly, to avoid the lid from jumping out

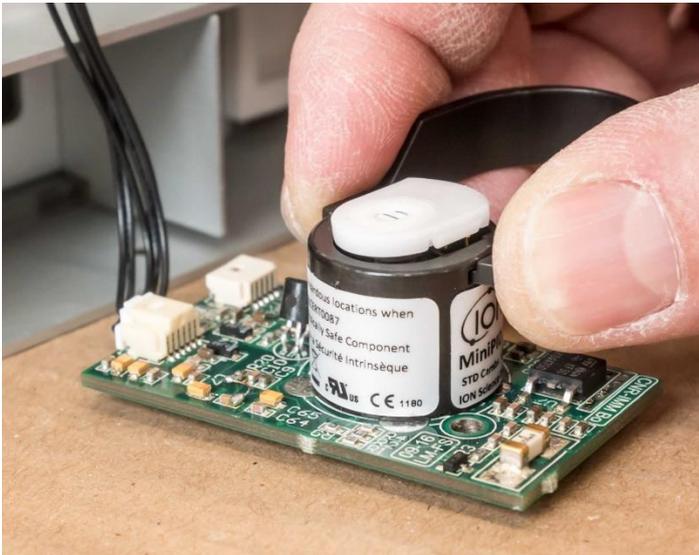

7- Carefully remove the old lamp from the detector using tweezers

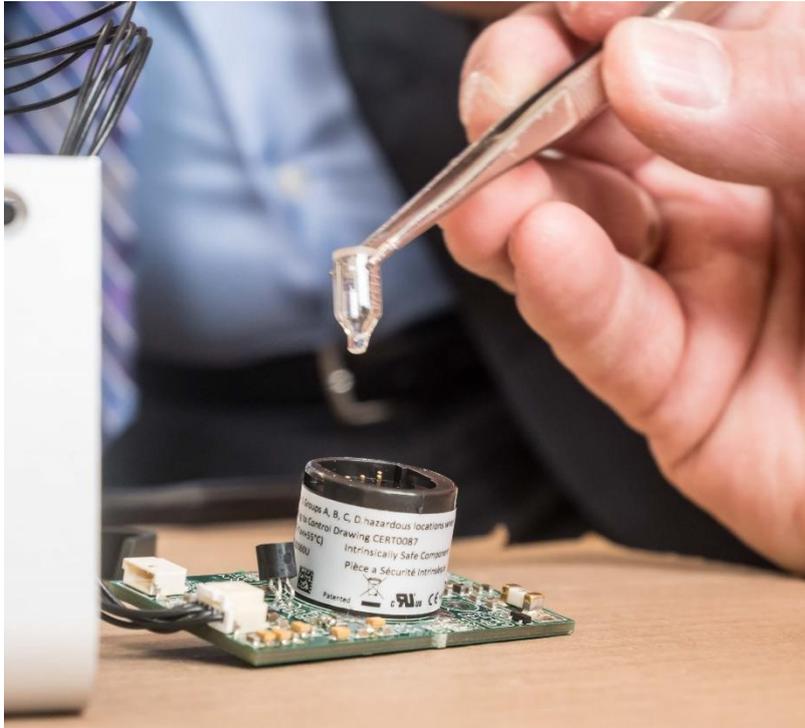

8- Then, install the new lamp inside, close back the lid, and do all the previous steps in the reverse order

