



SO2 module (T) – Replacing the socket of the flasher lamp

- 1- Tools you will need:
 - 1 small screwdriver
- 2- Turn off and unplug the airpointer. Pull the SO2 module drawer
- 3- Open the tissue cover and locate the lamp in the SO2 bench

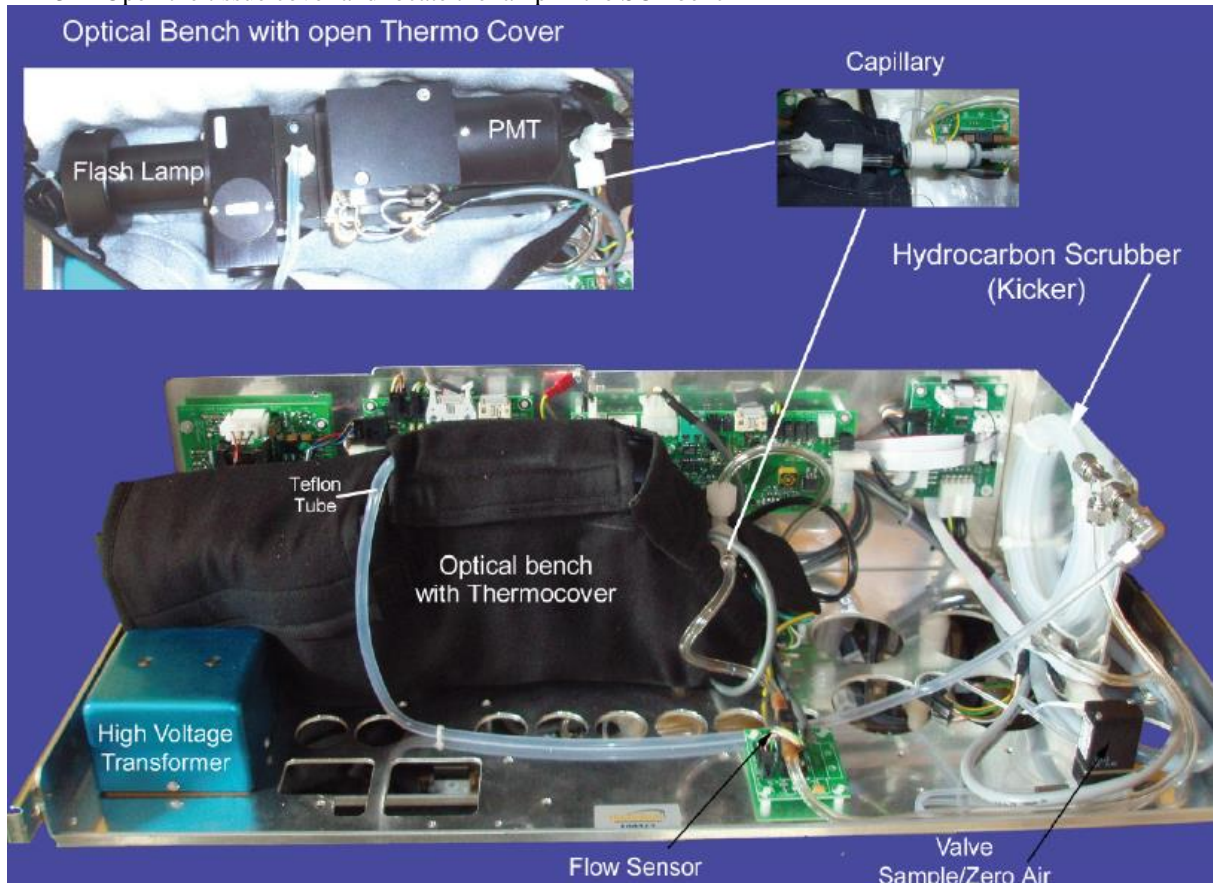

- 4- Remove the retaining screw and the flash trigger cable, and pull out gently the lamp + socket out of the bench assembly

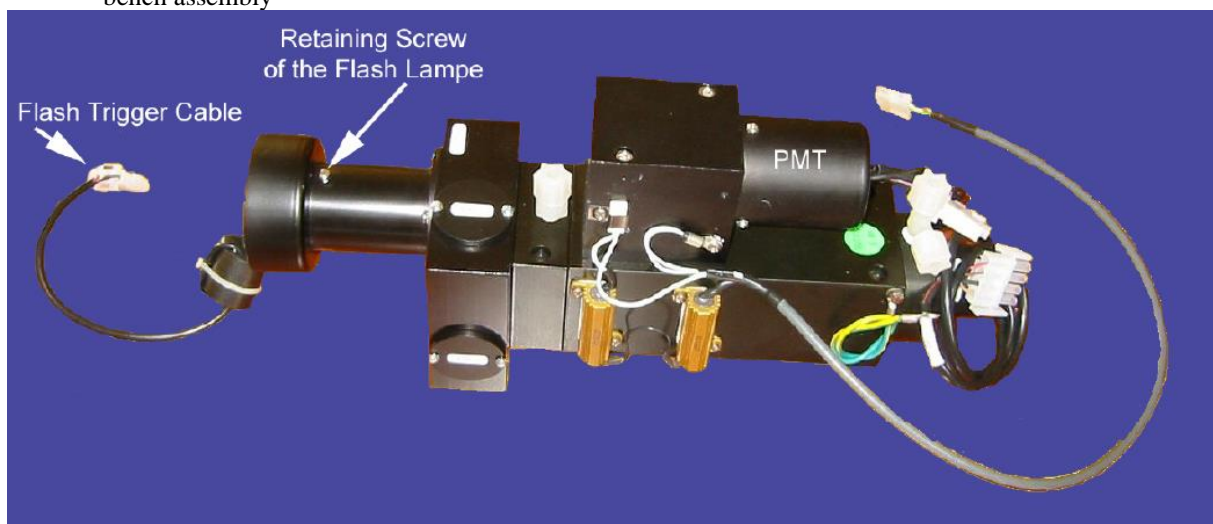

- 5- Remove the lamp by pulling it gently from its socket. Replace the socket, making sure its cable is rolled at least 4 times around the ferrite



- 6- Reinstall the socket + lamp into its original position, replace the retaining screw, the connector, and the tissue cover