



# AIRPOINTER TEST BENCH

## QUICK START GUIDE

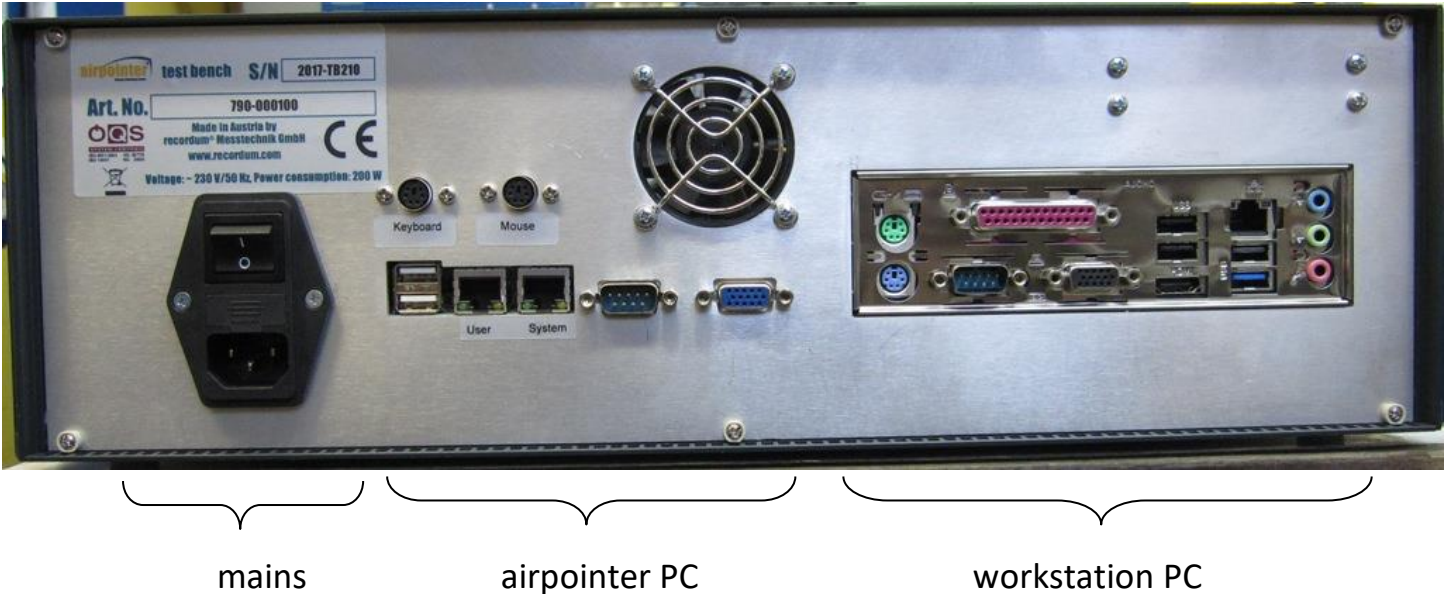

## 1) Connecting the airpointer test bench

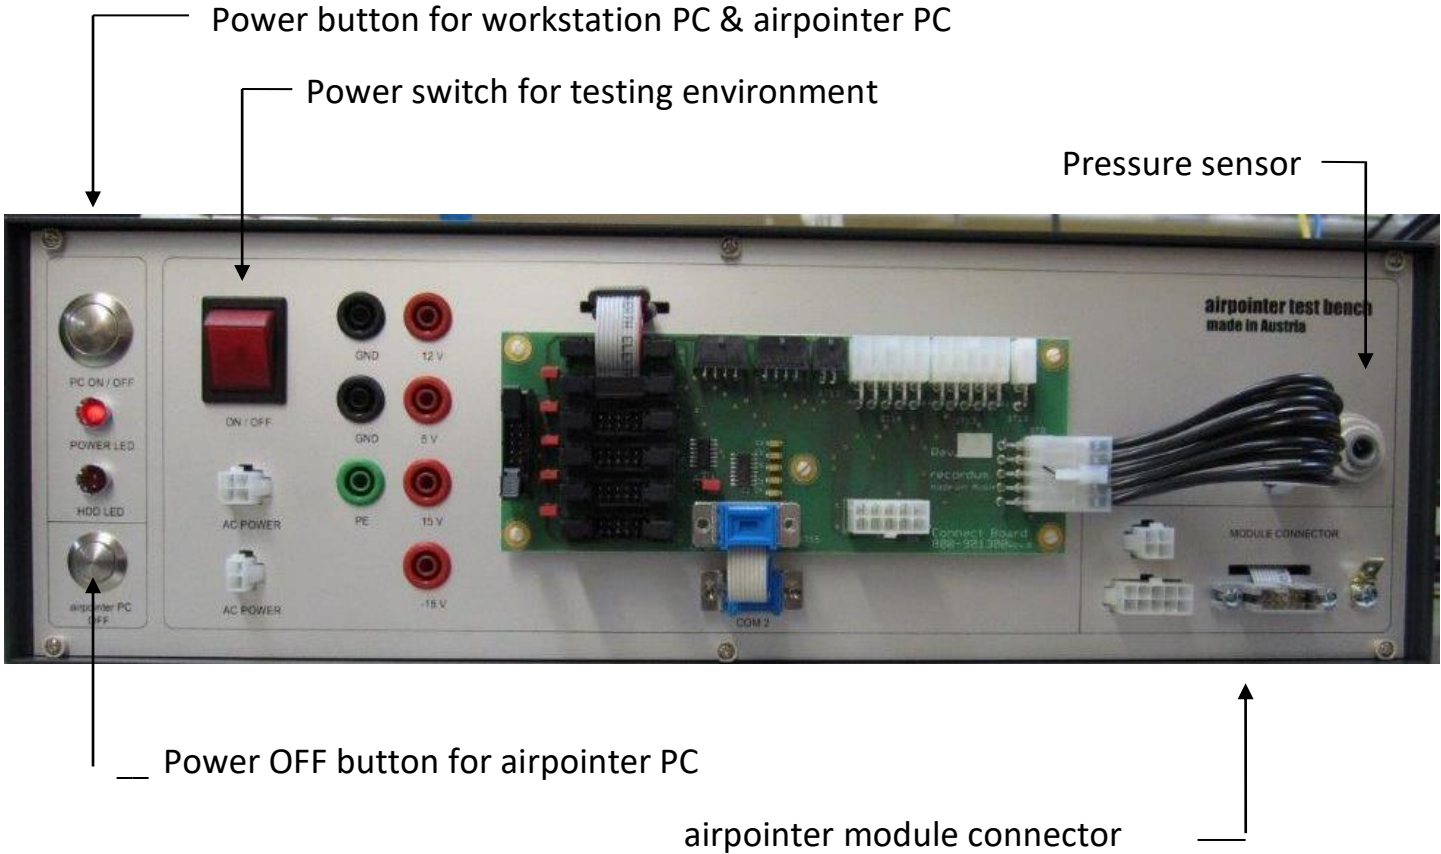

Connect workstation PC and airpointer PC "User interface" via network cable.

## 2) Starting up


Turn on main power supply and press the power button (PC ON/OFF)

By pressing the power button, airpointer PC and workstation PC are powered up at the same time.


## 3) Connecting airpointer module

Connect DC-power cable (10-pin MiniFit), AC-power cable (4-pin MiniFit), ground cable and flat cable to the "MODULE CONNECTOR"


Now you can switch on the power for the testing environment

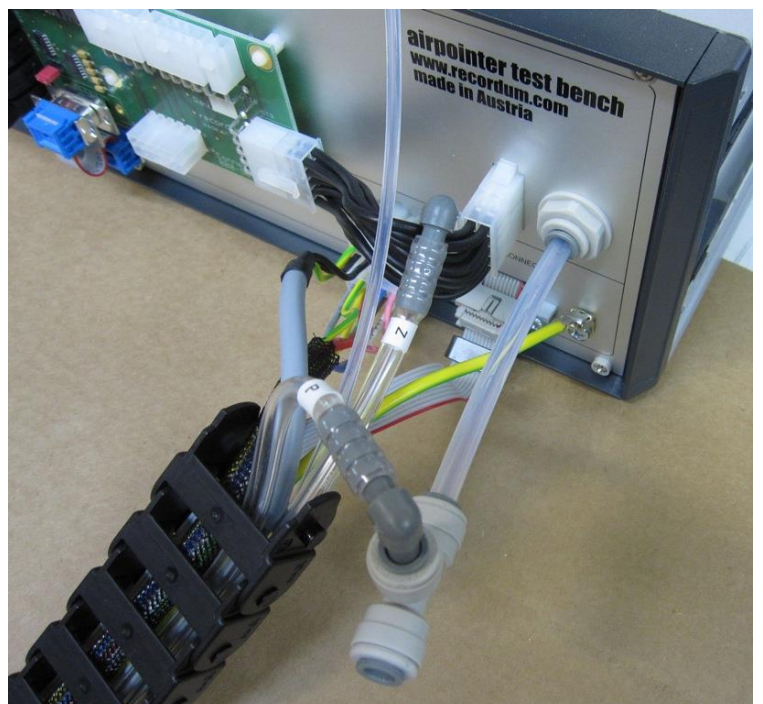

Start your browser and log in  
to the airpointer-PC  
(172.17.2.140)

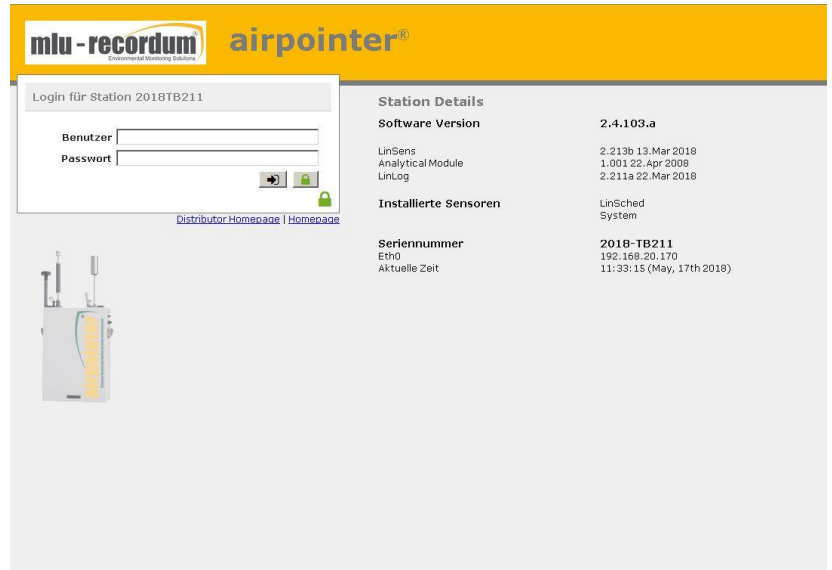


Set up correct module  
Therefore go to:  
**Setup** →  
**Configuration** →  
**Hardware**

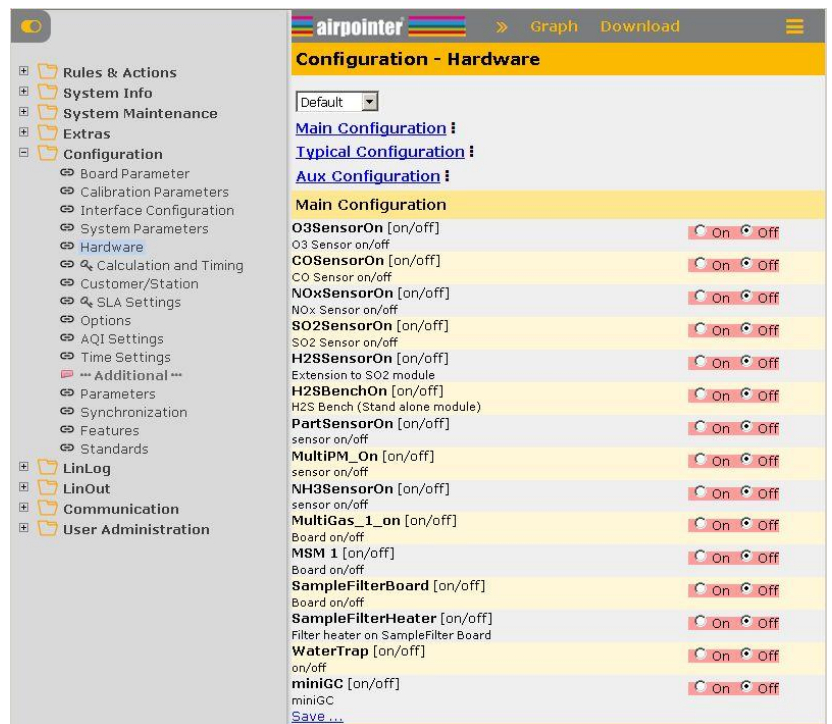

Save changes and restart  
the linsens, therefore go to:

**System Maintenance** →  
**Service Manager** →  
**The Lins** →  
**Force-restart** →  
**Execute**

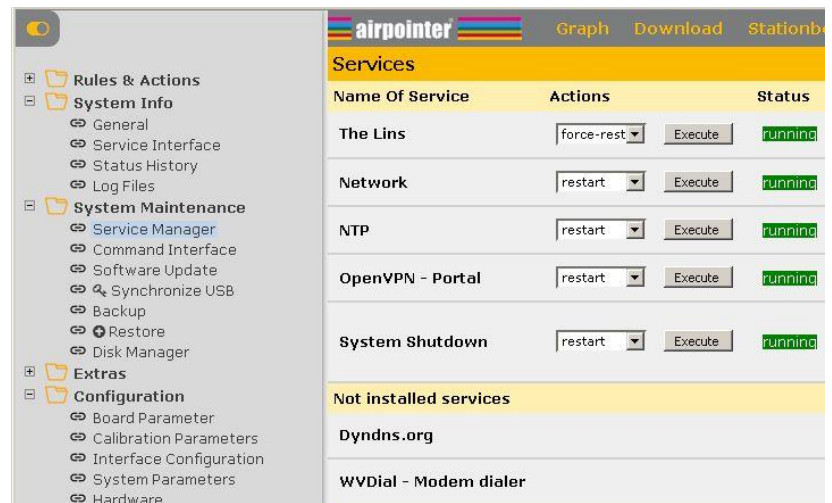


Now open the linsens interface

Therefore go to:

**System Info** →

**Service Interface** →

**LinSens**

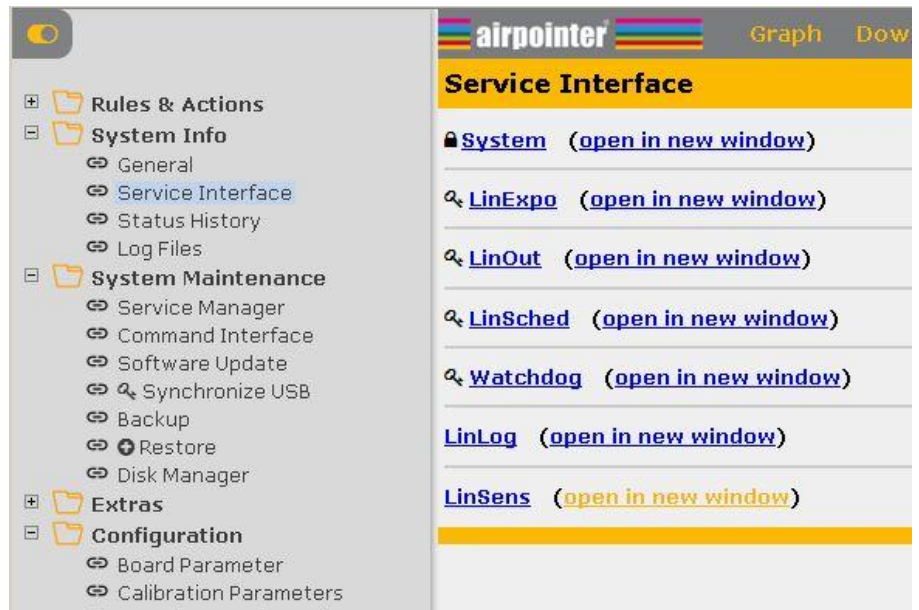

#### 4) Power off

To power off the testbench, you must first shutdown the airpointer-PC with the Power OFF button for airpointer PC.

Wait for shut down of the airpointer PC. ( 1 min.)

Now you can shut down your workstation-PC with the PC ON/OFF button.