


## BTEX module - Replacing the carrier gas filter

- 1- Turn off and unplug the airpointer
- 2- Disconnect the push-fit connector of the carrier gas from the filter and lift up the blue plastic wedge

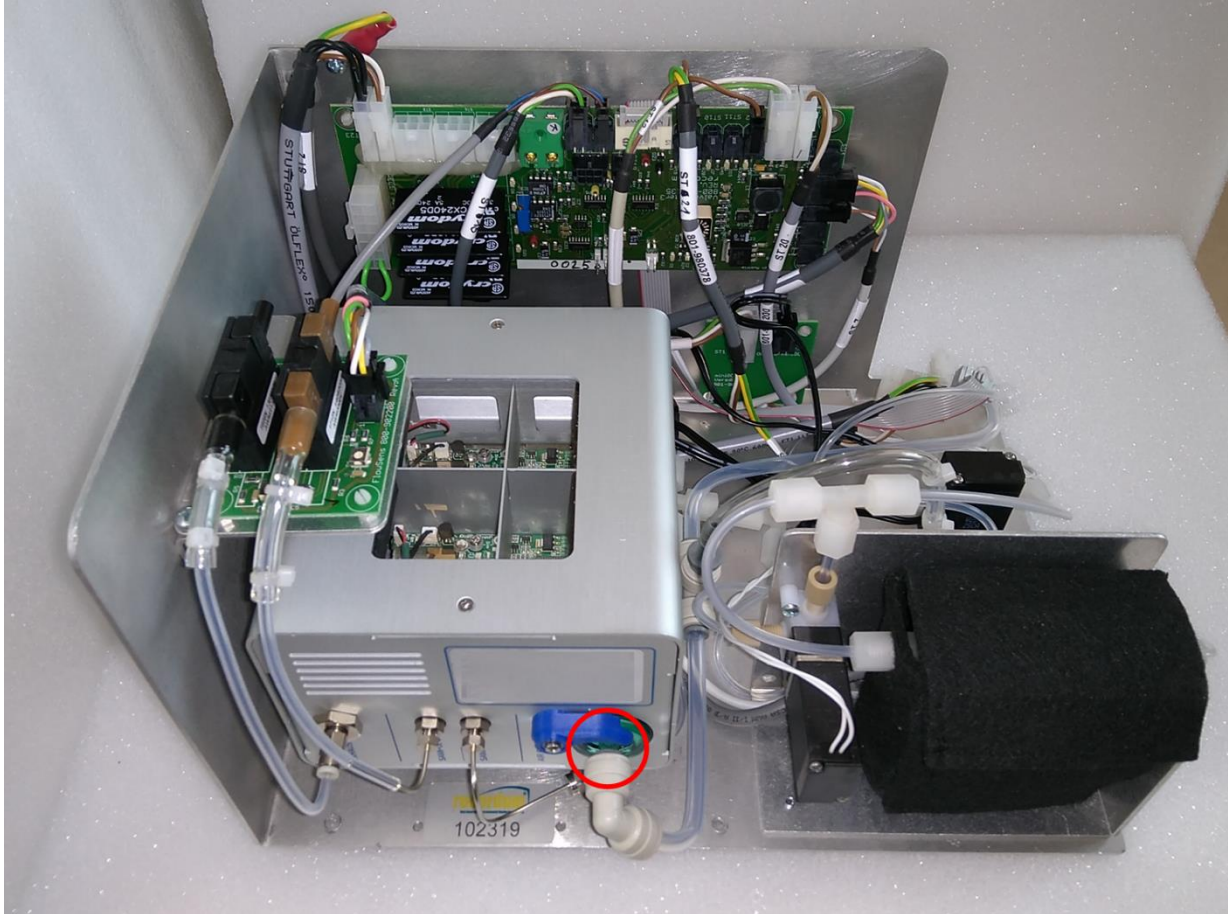

- 3- Pull out the old filter and push in the new filter in the same direction as the old one
- 4- Pull down the blue plastic wedge and reconnect the push-fit connector