


Base Unit HC - Unmounting and cleaning the complete air conditioner


- 1- Tools you need
 - A medium Phillips screwdriver
 - A Screwdriver Torx size T25
 - Low pressure compressed air

- 2- Turn off and unplug the airpointer

- 3- Unplug the 3 cables of the air conditioner: AC inlet, DC inlet, data cable

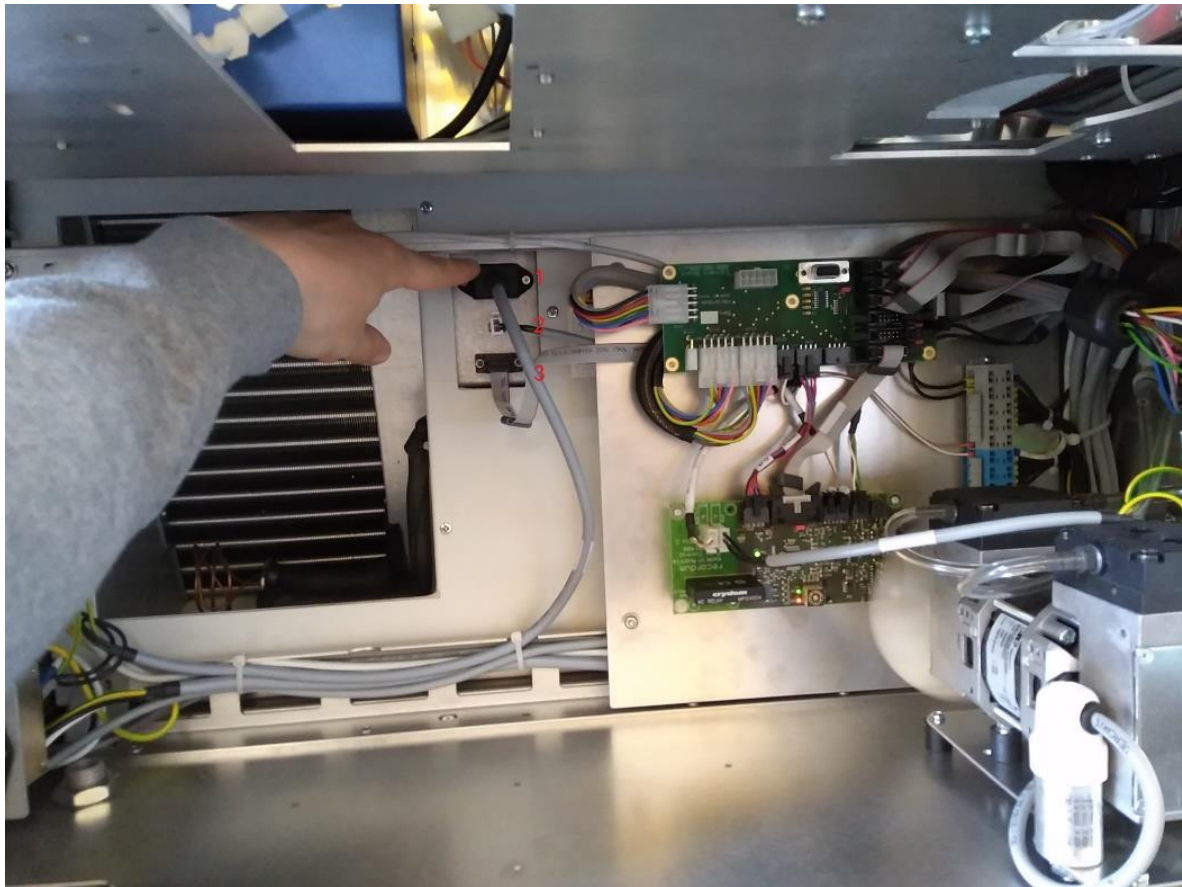

- 4- Remove the 2 screws holding the AC unit in the inner side of the airpointer housing

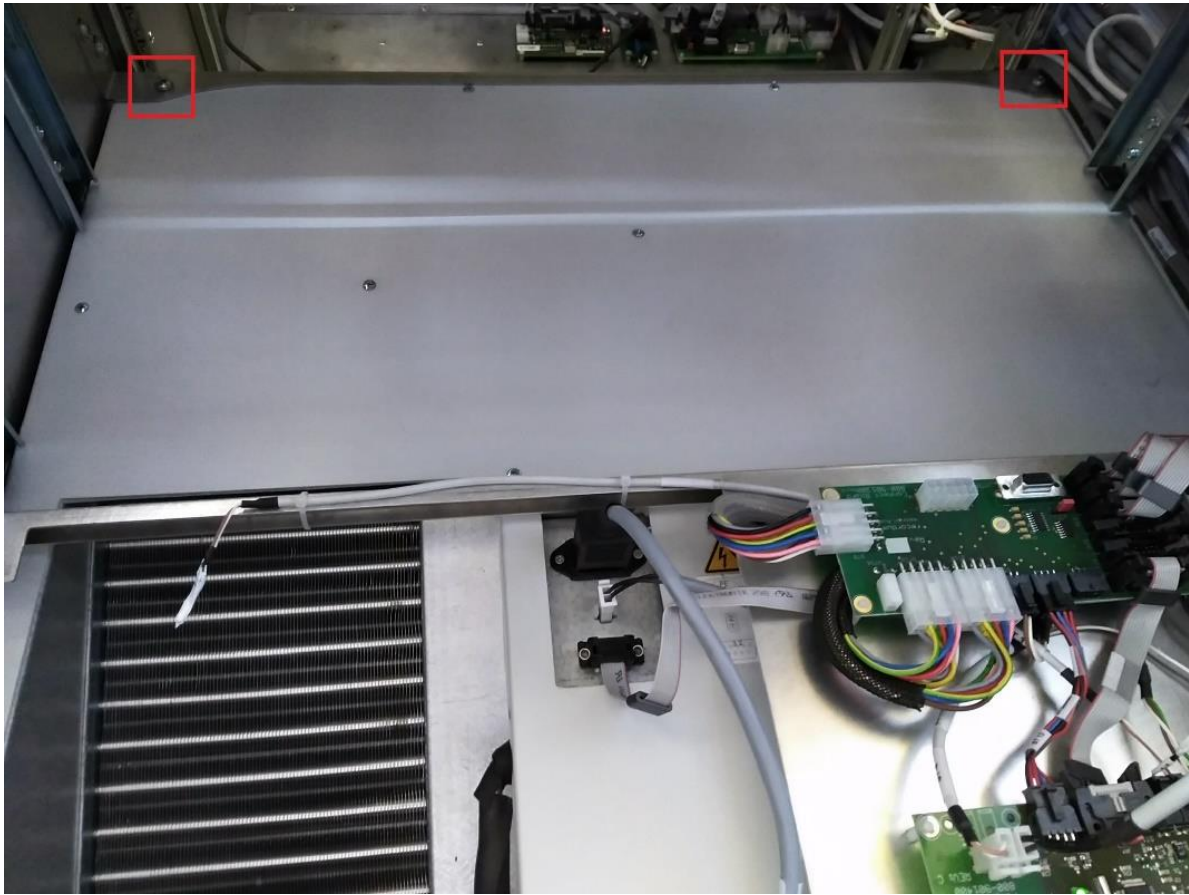

- 5- Remove the 6 screws holding the AC unit in the outer side of the airpointer housing



- 6- Slide out the AC by the side of the airpointer



the AC weighs over 20 Kg. Handle with care to avoid injuries.

- 7- Remove the 17 screws from the front cover



- 8- Remove the grounding from the front cover



- 9- Clean the dusty parts by blowing low pressure compressed air on them. Take care of using low pressure air only to avoid bending the fins. This is preferably done outdoors as it can spread by amounts of dust

