

## H2S module (T) – Replacing the scrubber

- 1- Turn off and unplug the airpointer. Pull the SO2 module drawer
- 2- Locate the scrubber



- 3- Unscrew the connectors holding the scrubber and remove the scrubber from the module
- 4- Empty the old scrubbing material
- 5- Fill with fresh scrubbing material, making sure not to leave empty space to maximize its efficiency
- 6- Screw the connectors back onto the scrubber