


NOx module (A) – Replacing the valves kit

- 1- Tools you need
 - wrench ½” and 7/16”
- 2- Turn off and unplug the airpointer. Pull the NOx module drawer
- 3- Locate the valves kit

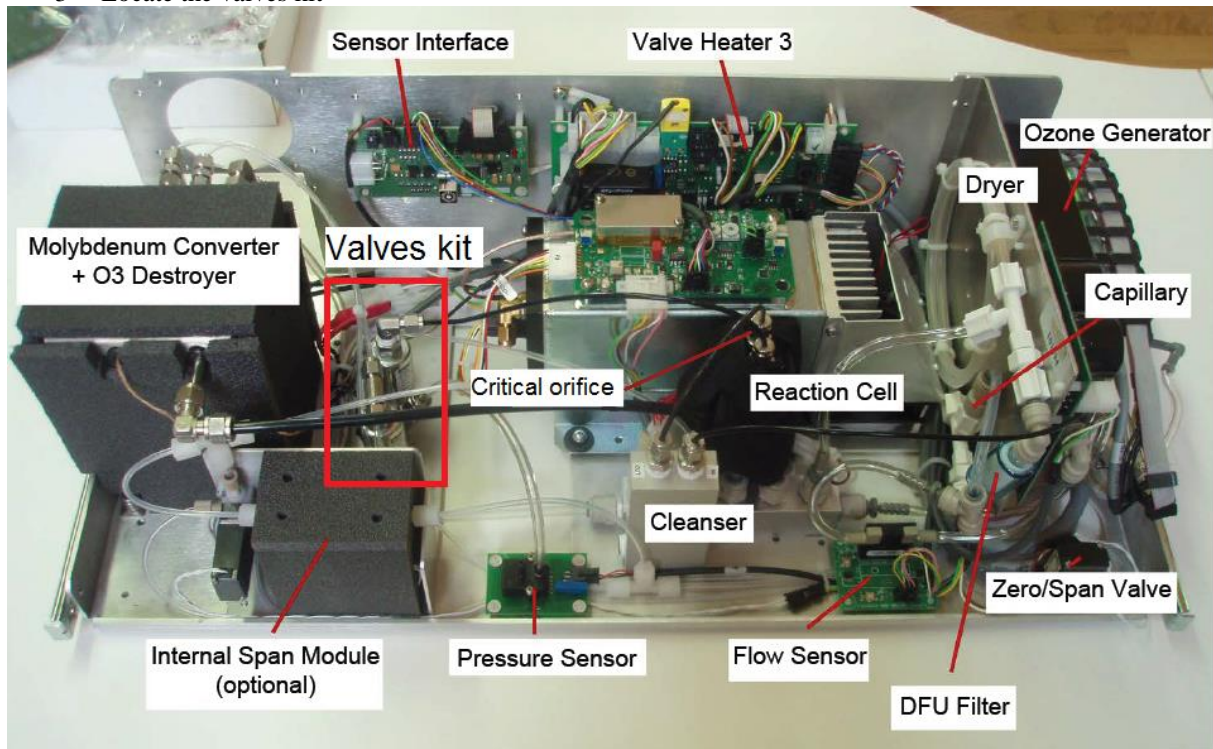

- 4- Unscrew the pneumatic connectors and remove the old valves from the module
- 5- Install the new valves and reconnect the pneumatic connectors