

## BTEX module - Removing the GC from the BTEX module


- 1- Tools you need
  - A medium Phillips screwdriver
  - 2 small wrenches
- 2- Turn off and unplug the airpointer, then turn off the main switch, remove the USB cable and the power cable at the back of the GC



- 3- Remove the 4 pneumatic connectors at the front of the GC



- 4- Unscrew the 4 feet of the GC in order to detach it from the module

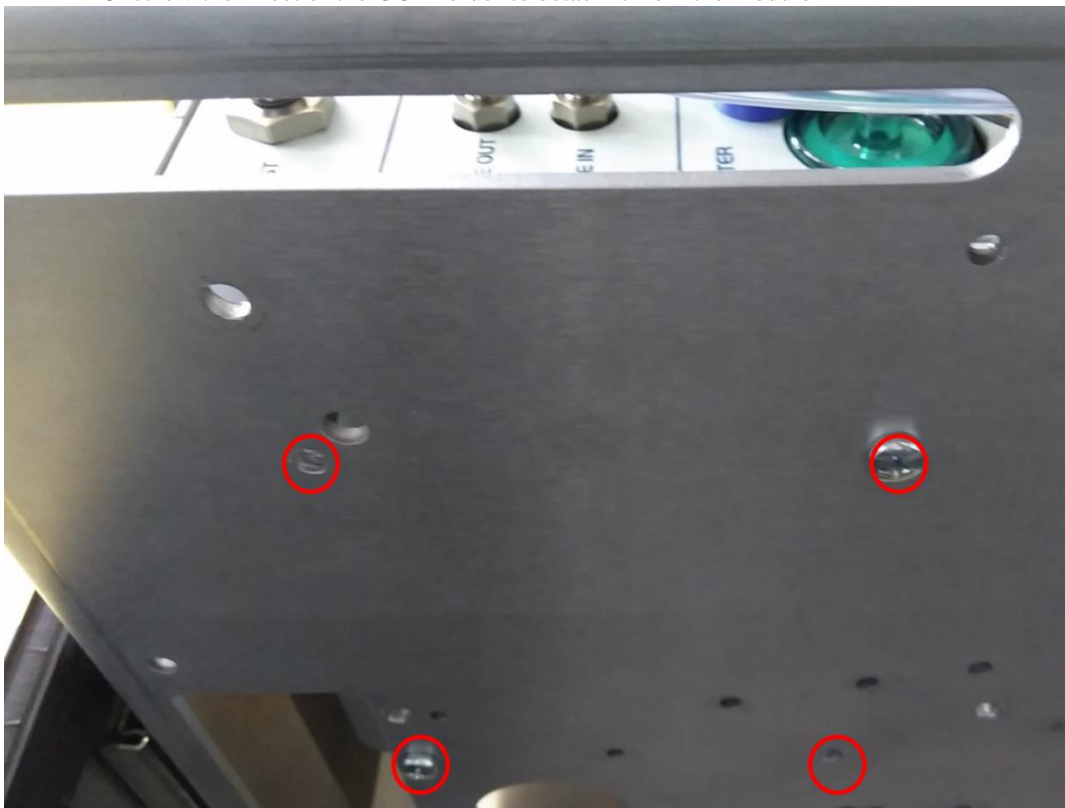

- 5- The PC can now be removed