

## PC – Removing the PC from the Airpointer


- 1- Tools you need
  - A big Phillips screwdriver
  
- 2- Turn off the airpointer, pull out the power plug, and wait a few minutes: when the power is down, the miniUPS inside the airpointer powers the PC for 60 seconds. If the power isn't back after 60 seconds, the Watchdog board shuts the PC down, which can take another minute
  
- 3- Remove all the connectors to the PC: USB, Ethernet, serial on the front and on the right handside



4- Remove all the connectors to the Watchdog board

- Watchdog Connectors

DC Power to Akku switch      DC Power PC      Modem

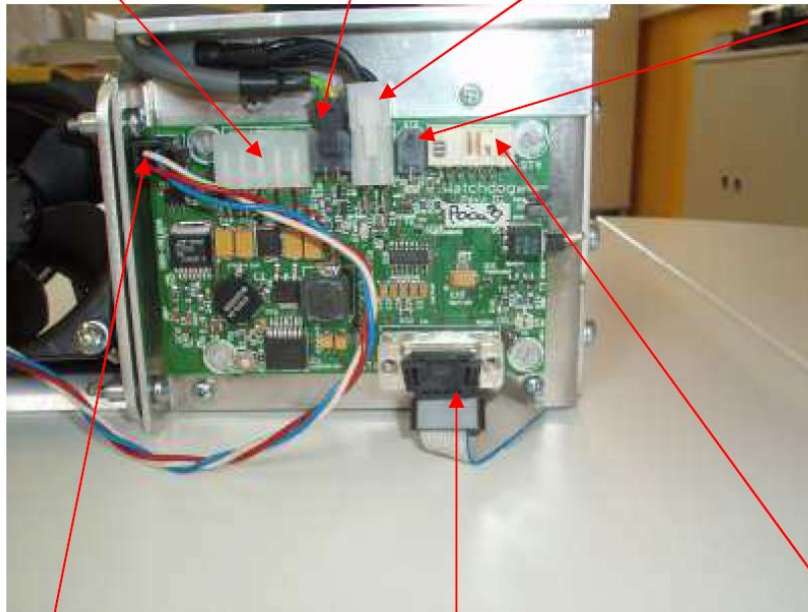

PC Fan

to COM2

RS232 to Connect Board

5- Remove the 4 screws holding the PC to the ceiling of the airpointer, holding the PC to make sure it doesn't fall down suddenly

6- The PC + Watchdog assembly can now be removed from the Airpointer