


## Grimm EDM180 – Unmounting from the airpointer

- 1- Tools you will need
  - A big Phillips screwdriver or a big hexagonal key depending on the version
- 2- Turn off the airpointer, unplug the power cord, and turn off the main power on the Grimm 180
- 3- Open the Grimm door, pull the lever out and bring it to the down position



- 4- Unscrew the 4 hexagonal screws on the front of the Grimm, gently pull out the Grimm out, taking care of not putting too much strain on the cables

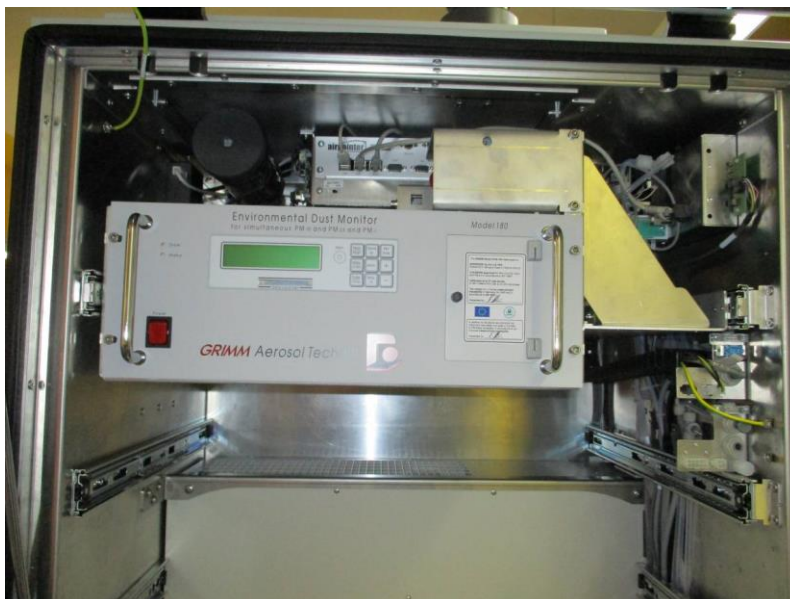

- 5- Disconnect all the cables at the back of the Grimm and pull the analyzer completely out of the airpointer