

Recordum Licensing System:

It has happened that customers are not paying your distributor an airpointer for month, while they are reporting data measured with this airpointer, to the authorities. To avoid situations like this, we added a licensing system with three keys to your units.

- Factory Key
- Distributor Key
- Hardware Key


The function is, that after the expire time is over, the instrument will not store data and deliver only missing value indicators on the interfaces. As soon the contract is fulfilled, you ether receive a key from the distributor and you put it in, or he is doing this for you, if your machine is online. In the same way the distributor key handled between end user and distributor, the factory key is working between factors and distributor.

The Hardware Key is only needed when the Wafer board (= Industrial PC) is changed, then you type in the Hardware Key you will get together with the new board.

Once the correct keys are in, they cannot be deactivated and will work forever.

On a hardware change, a period of 1 month will start until a new key has to be typed in.

Setup->Configuration->System Parameters [Advanced]->License

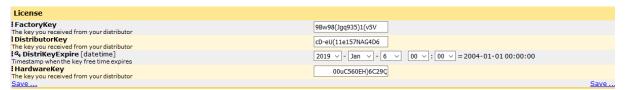

Service Interface Watchdog (url airpointer-xxxx-xxxxxx.recordum.net/watchdog)

