


O3 module (T) – Checking the capillary

- 1- Turn off the airpointer, pull out the power cord, and pull out the ozone module
- 2- Locate the capillaries (2 x 801-980013 Capillary purple)

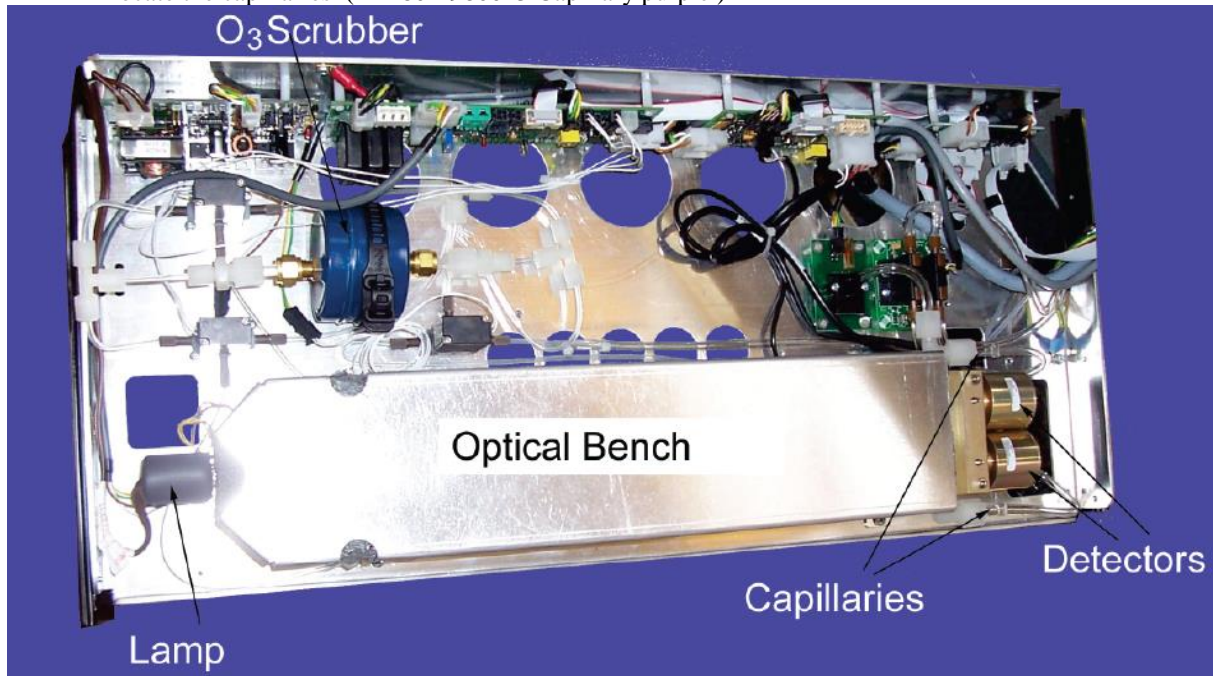

- 3- Remove the connectors holding the capillary, inspect it and if necessary, install a new capillary. In the absence of flow / pressure / leak problems, and if the capillary looks clean and intact, put the capillary back in place