


MultiPM – Cleaning the sample inlet

1- Tools you need

- 1 wrench 9/16" and 1 wrench 1/2"
- A soft cloth and a soft pipe cleaning brush

2- Turn off and unplug the airpointer. Locate the MultiPM inlet and unscrew the connector to the heater.

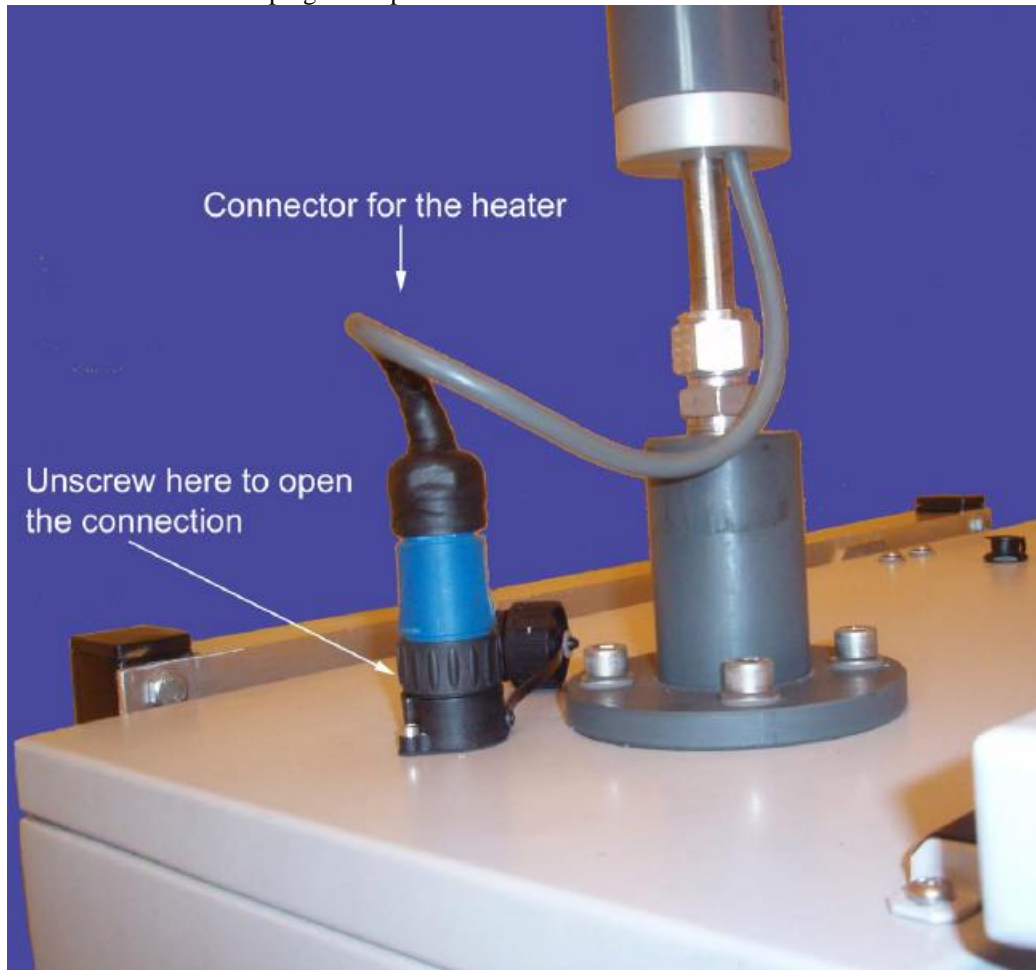

3- Unscrew the 1/4" Stainless steel connector and remove the sample inlet from the airpointer

4- Disconnect the TSP head from the inlet



- 5- Clean carefully the TSP head with a moist smooth cloth inside and outside
- 6- Check the inlet tube and if necessary, clean the inner surface with a soft brush or a soft cloth
- 7- Reassemble the sample inlet, screw it back to the airpointer, and reconnect the heater