


## O3 module (T) – Replacing the scrubber

- 1- Tools you need
  - 9/16" and 1/2" wrenches
- 2- Turn off the airpointer, pull out the power cord, and pull out the ozone module
- 3- Locate the scrubber inside the module

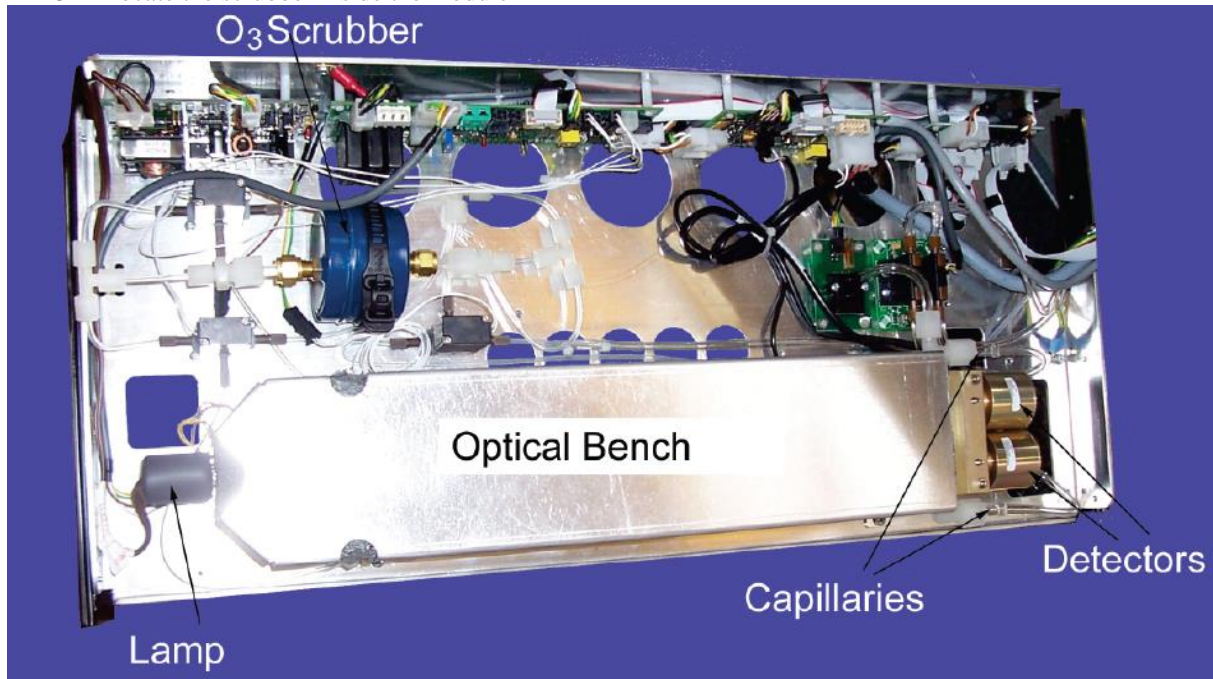

- 4- Disconnect the two 1/8" tubes on the front and the back side of the scrubber
- 5- Remove the old scrubber by taking it out of the black clamp
- 6- Insert the new scrubber the same way you located the old one
- 7- Reconnect the two 1/8" tubes to the scrubber
- 8- Perform a Sample Flow Check